

LASERLYTE



LASERLYTE®

Standard

# UNIVERSAL RAIL MOUNT LASER SYSTEM — Curly Cord Standard — LRS-0650-CCW

This mount utilizes a unique claw-type system that securely attaches the laser sight to the pistol or long gun mounting rails. The mount is precision CNC machined from aircraft-grade aluminum for maximum strength and durability.

Fits all firearms with Weaver/Picatinny-Type Rails and Mounting Bases



- 500 Yard Range
- Pressure Switch w/Curly Cord
- Adjustments for Windage and Elevation
- 650 nm laser module
- One Year Limited Warranty

 
### PARTS INCLUDED



**DANGER**



LASER LIGHT  
AVOID DIRECT EYE EXPOSURE  
POWER OUTPUT <5mw  
WAVELENGTH 630-670nm  
CLASS IIIa PRODUCT

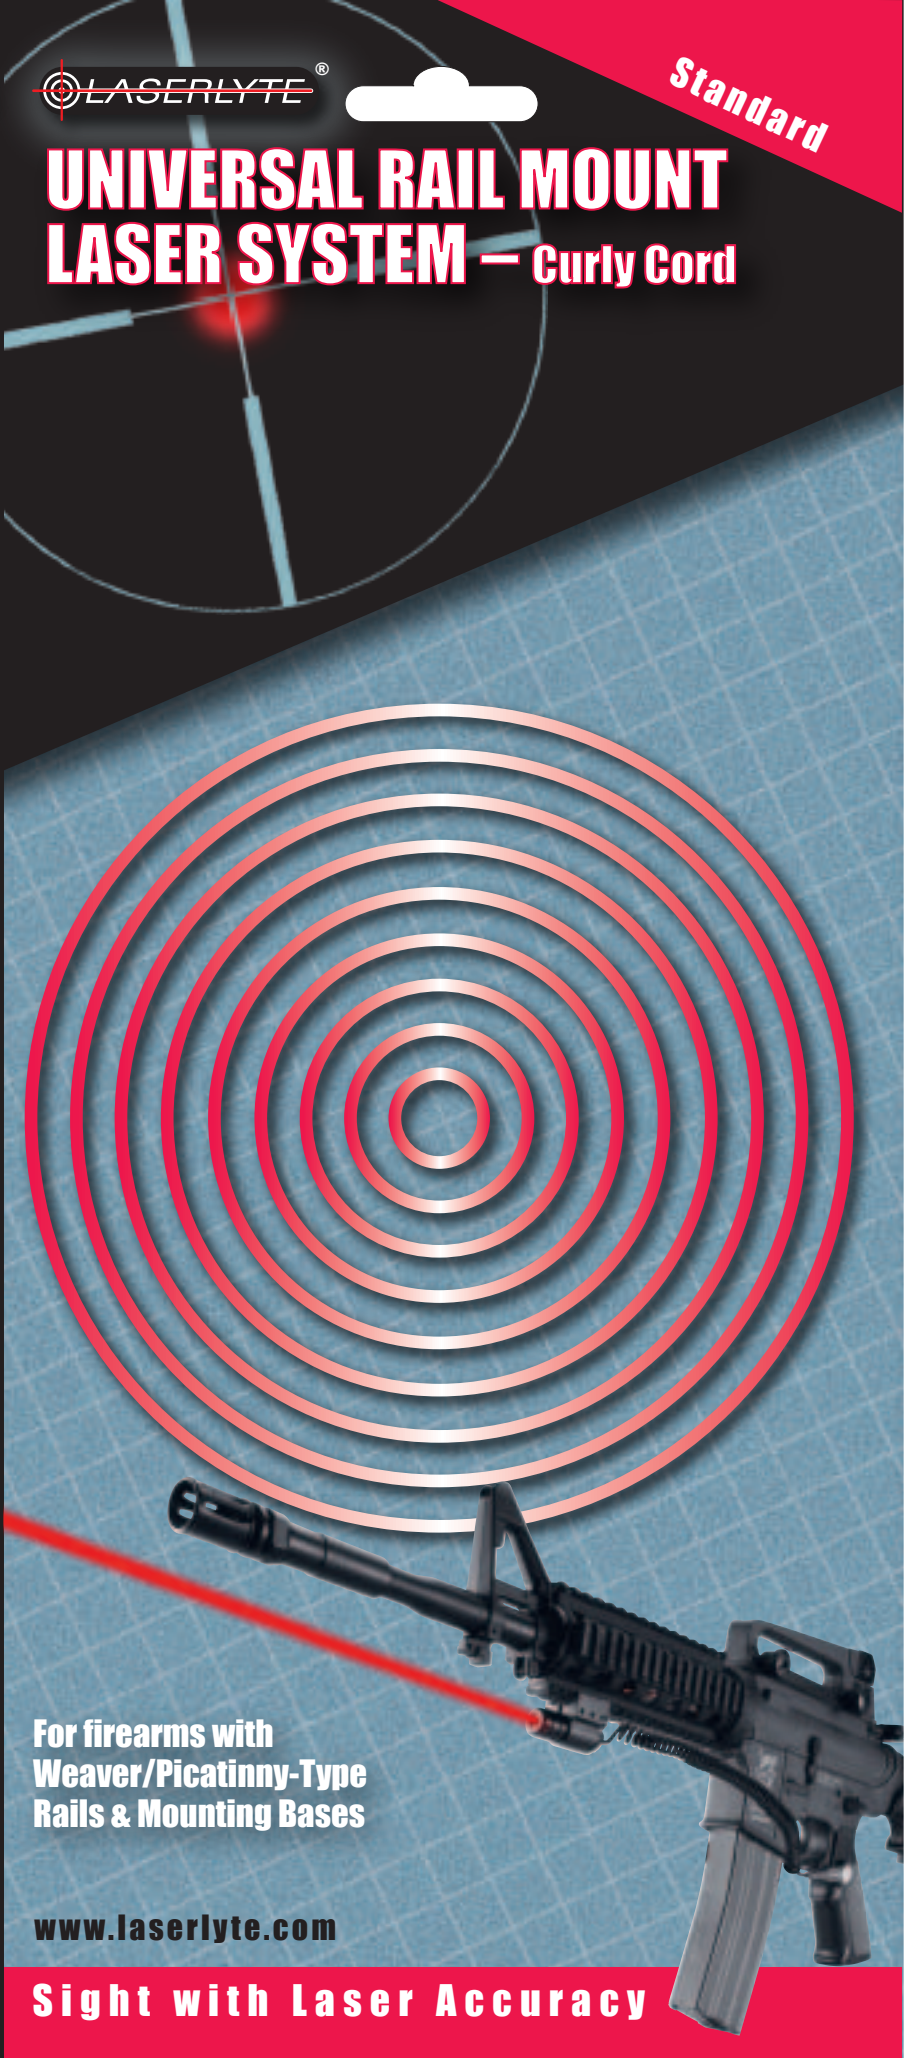

# UNIVERSAL RAIL MOUNT LASER SYSTEM — Curly Cord

For firearms with Weaver/Picatinny-Type Rails & Mounting Bases

 
[www.laserlyte.com](http://www.laserlyte.com)

**Sight with Laser Accuracy**

[www.laserlyte.com](http://www.laserlyte.com)

# UNIVERSAL RAIL MOUNT LASER SYSTEM

## LRS-0650-CCW & LRS-0635-CCW INSTALLATION AND OPERATING INSTRUCTIONS

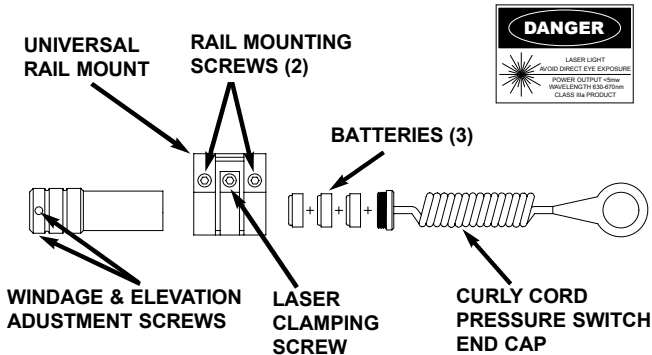


**CAUTION: AVOID DIRECT EYE EXPOSURE TO THE LASER LIGHT. NEVER POINT THE LASER TOWARD ANYONE'S EYES.**

### CLAMPING LASER IN MOUNT

Referring to Figure 1, place the Laser Body into the Universal Rail Mount. Position the Laser Body so that 1 adjustment screw is facing the (either) side and 1 adjustment screw is facing the bottom. Once the Laser Body is placed correctly in the mount, tighten the center clamping screw (with hex wrench supplied). Place the 3 batteries in the rear of the laser (with the positive sides towards the rear) and install the Curly Cord Pressure Switch End Cap.

### BEFORE PROCEEDING MAKE SURE YOUR FIREARM IS UNLOADED!

 
**FIGURE 2**

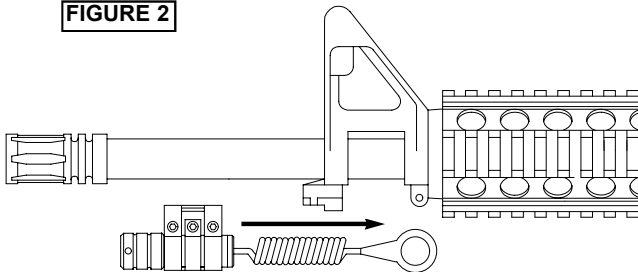

### PLACING MOUNT AND LASER ON A LONG GUN

This laser can be mounted on any rifle, carbine or shotgun with picatinny or weaver type mounting rails. Referring to Figure 2, slide the mount with laser on to the picatinny or weaver type mounting rails to desired location and tighten the 2 outside mounting screws.

Refer to Figure 3, and route the pressure switch to an easy to operate location (forend, receiver, grip, etc.) and attach with supplied adhesive backed Velcro pad. This cord extends from 8 inches to over 24 inches.

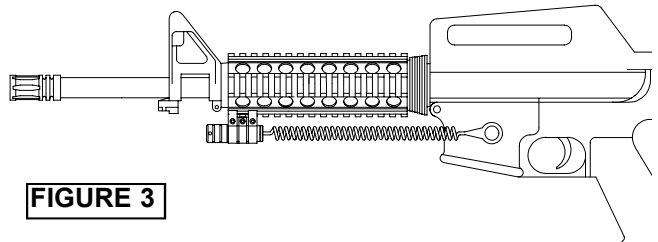 

**FIGURE 3**

### OPERATION OF LASER

When the Laser & Mount have been properly installed, the pressure switch should be placed in an easy to operate location. To turn "On" the laser, apply pressure to the switch and to turn off, relax pressure to the switch.

### "SIGHTING-IN" THE LASER

Adjust the laser dot using the windage and elevation adjustment screws until the dot corresponds to your iron sights or scope. Do this at the distance your firearm is sighted-in at. Fine adjustments can be made at the range by adjusting the laser according to bullet impact.

### BATTERY REPLACEMENT

#### Expected Battery Life:

#### LRS-0650-CCW & LRS-0635-CCW

**Both units will operate for approximately 2 hours continuous on a single set of batteries**

This amount of operating time when used in short bursts will last much longer before battery replacement would be required. These units operate on 3 #A-76 batteries which are inexpensive common watch/calculator batteries. Many manufacturers make them under different numbers such as LR-44, AG13, G13-A, etc. When replacing the batteries, remove the Laser & Mount from the pistol, unscrew the End Cap, remove old batteries and replace with new. Note: positive side of batteries go toward the End Cap.

### WARRANTY

The Laser is warranted for one year from any manufacturer's defects from the date of purchase.

For information on other great products from LaserLyte check out our web-site at [www.LaserLyte.com](http://www.LaserLyte.com) or call us at 928-649-3201.



**101 AIRPARK RD. - COTTONWOOD, AZ 86326  
Phone 928-649-3201 - Fax 928-649-3970**